



1. Print your image in reverse onto sublimation paper with your sublimation printer.

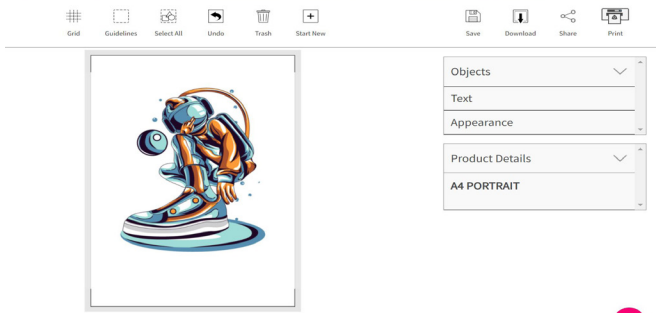

2. Cut the outline of your design as you want it to appear on the garment in the SubliFlock/SubliFabric.

3. Weed out the excess film and line up your printed sublimation paper onto the SubliFlock/SubliFabric

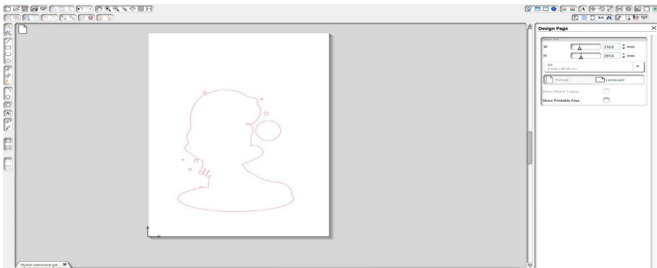

4. Heat press the sublimation paper onto the SubliFabric/ SubliFlock at 180C-190C for 20 seconds. Then remove the paper from the vinyl. Your design will transfer over from the paper onto the vinyl.

5. Peel the design off its release liner and place onto your garment. If pressing a design with multiple parts, you can use an application tape.



6. Heat press your design at 180C-190C for 5 seconds. Cover with a protective sheet if not using an application tape. Remove sheet/application tape and your design is complete.